



Operating instructions Remote control TC


Sales contact:

Manufacturer:

THE FLAME · Rainer Biemann
Schalserstraße 41 · A-6200 Jenbach
www.theflame.at · info@theflame.at

THE FLAME 02-2015

Operating instructions 8-symbol remote control

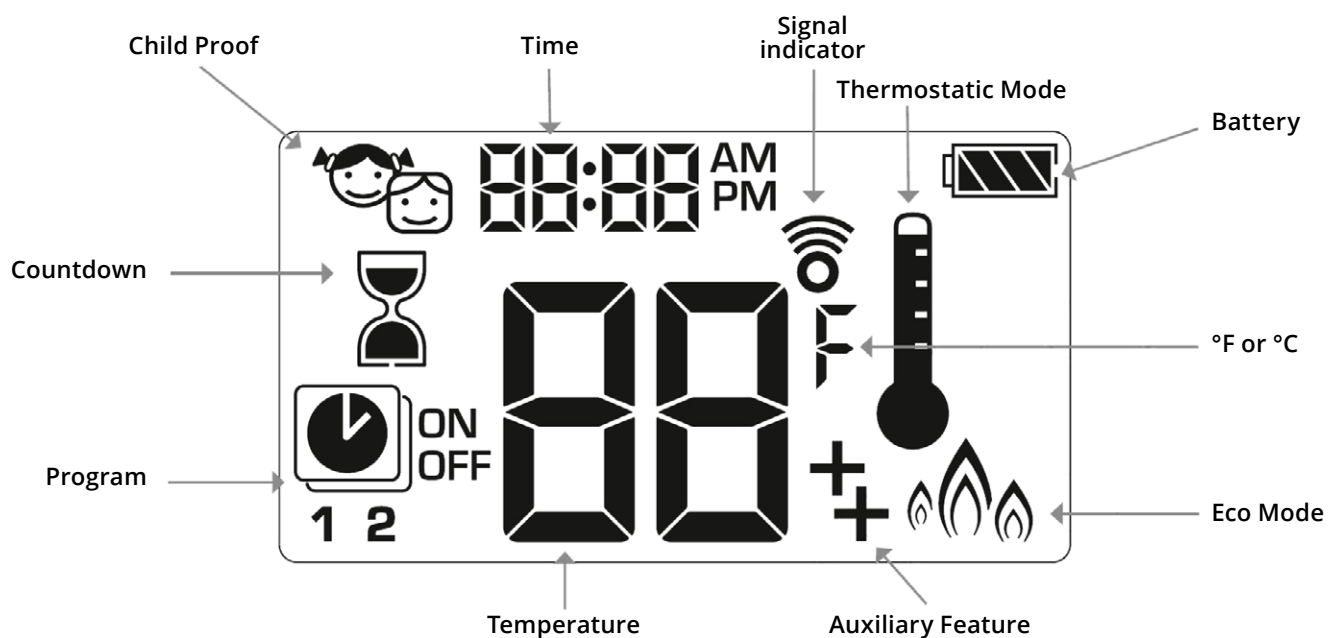

8-symbol display



Please follow the indicated safety recommendations and warning notices!

Setting celsius or fahrenheit











To change between °C and °F, press  and  buttons simultaneously.

Note:

Choosing °F results in a 12 hour clock. Choosing °C results in a 24 hour clock.

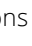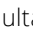


Setting the time

1. Press  and  buttons simultaneously. Hour flashes.
2. To select hour press  or  button.
3. Press  and  buttons simultaneously. Minutes flash.
4. To select minutes press  or  button.
5. To confirm press  and  buttons simultaneously or wait.





Modes of operations

Enter mode

Press the appropriate mode button.   

Exit mode

1. Press the same mode button again to change to manual mode.
2. Press  or  button to change to manual mode.
3. Press a different mode button to change to that mode.



Thermostatic mode

The room temperature is measured and compared to the set temperature.
The flame height is then automatically adjusted to achieve the set temperature.



Program mode


Programs **1** and **2**, each can be programmed to go **ON** and **OFF** at specific times at a set temperature.



Please follow the indicated safety recommendations and warning notices!

Eco mode


Flame height modulates between high and low depending on room temperature in relation to set temperature. If the room temperature is lower than set temperature, the flame height stays on high longer. If the room temperature is higher than set temperature, the flame height stays on low longer. Once cycle takes approx. 40 min.

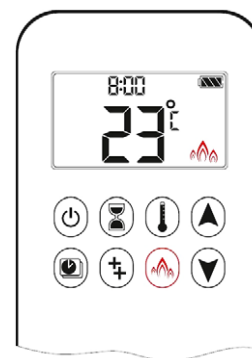

Manual mode (Handset)

Note:

Before operating:

1. Make sure **MANUAL** knob on the GV60 Valve is in the **ON**, full counter clockwise  position.
2. Place the **ON/OFF** switch (if equipped) in the "I" (**ON** position).


To turn on fire

Warning:


When pilot ignition is confirmed, motor turns automatically to maximum flame height.



Handset One-Button Operation (Default Setting)

- Press  button until two short beeps and a blinking series of lines confirms the start sequence has begun; release button.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition (CSA version, CE version).

Note:



Change from one-button to two-button ignition operation by pressing and holding  button for 16 sec. immediately after installing batteries.

ON is displayed and **1** is flashing. When change is complete **1** changes to **2**.




Please follow the indicated safety recommendations and warning notices!

Handset Two-Button Operation

- Press  and  button simultaneously until two short beeps and a blinking series of lines confirms the start sequence has begun; release buttons.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition (CSA version, CE version).


Note:

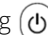Change from two-button to one-button ignition operation by pressing and holding  button for 16 sec. immediately after installing batteries.


ON is displayed and **2** is flashing. When change is complete **2** changes to **1**.

Warning:

If the pilot does not stay lit after several tries, turn the main knob to **OFF** and follow the instructions **“Turn off gas appliance”**.

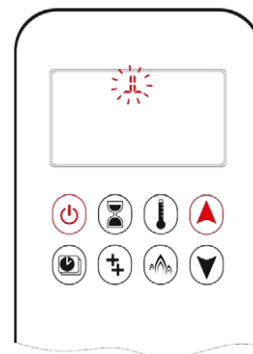

Standby mode (Pilot flame)


- Press and hold  button to set appliance to pilot flame.

To turn off fire



- Press button  to turn OFF.


Note:

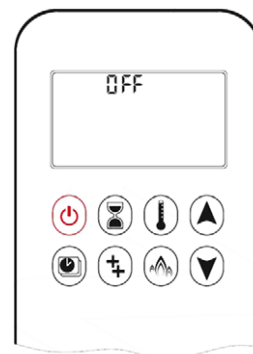There is a 5 sec delay before the next ignition is possible.



Flame height adjustment

- To increase flame height pres hold  button.
- To decrease flame height or to set appliance to pilot flame, press and hold  button.

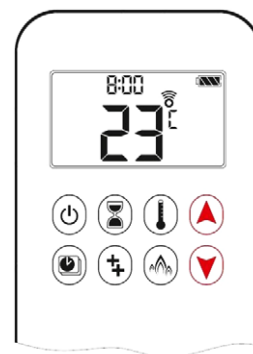

Designated low fire and high fire

- To go to low fire, double-click  button. **“LO”** is displayed.


Note:

Flame goes to high fire first before going to low fire.

- To go to high fire, double-click  button. **“HI”** is displayed.

Warning:


If the appliance will not operate, follow the instructions **“Turn off gas appliance”**.

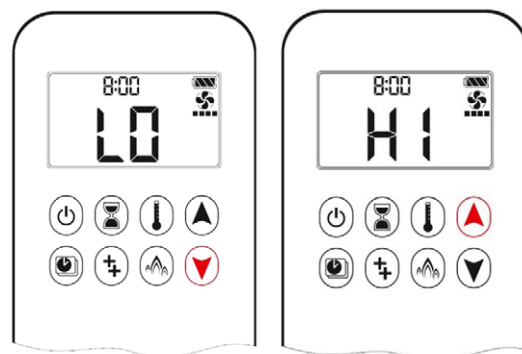






Please follow the indicated safety recommendations and warning notices!

Thermostatic mode





ON:



Press  button. Thermostat icon displayed, preset temperature displayed briefly, and then room temperature displayed.

OFF:

1. Press  button.
2. Press  or  button to enter Manual Mode.
3. Press  button to enter Countdown Timer Mode.
4. Press  button to enter Eco Mode.





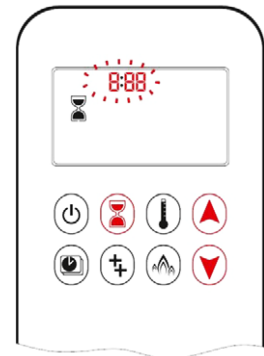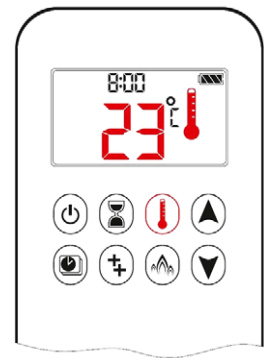


Setting:

1. Press  button and hold until Thermostat icon displayed, temperature flashes.
2. To adjust set temperature press  or  button.
3. To confirm press  button or wait.




Countdown timer

ON / Setting:

1. Press and hold  button until hourglass icon displayed and hour flashes.
2. To select hour press  or  button.
3. To confirm press  button. Minutes flash.
4. To select minutes press  or  button.
5. To confirm press  button or wait.

OFF:

Press  button, hourglass and countdown time disappear.

Note:

At end of countdown time period, the fire turns off. The Countdown Timer only works in Manual, Thermostatic, and Eco modes. Maximum countdown time is 9 hours.



Please follow the indicated safety recommendations and warning notices!

Program mode



Note:

The set temperature for Thermostatic mode is the temperature for the **ON** time in Program mode. Changing the Thermostatic mode set temperature also changes the **ON** time temperature in Program mode.





Default settings:

Temperature **OFF**: " — — " (pilot flame only)









ON:

Press  button. , 1 or 2, **ON** or **OFF** displayed.

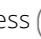OFF:

1. Press  or  or  button to enter Manual mode.
2. Press  button to enter Thermostatic mode.






Temperature setting:

1. Press  button and hold until  flashes, **ON**, Set temperature (thermostatic) displayed.
2. To continue press  button. , **OFF** displayed, temperature flashes.
3. Select **OFF** temperature by pressing the  or  button.
4. Confirm by pressing  button. , 1, **ON** displayed, hour flashes.









Note:

The **ON** (thermostatic) and **OFF** set temperatures are the same for each day.

ON time setting:


5. To select hour press  or  button.
6. To confirm press  button. 1, **ON** displayed, minutes flash.
7. To select minutes press  or  button.

OFF time setting:

8. To confirm press  button. , 1, **OFF** displayed, hour flashes.
9. To select hour, press  or  button.
10. To confirm press  button. , 1, **OFF** displayed, minutes flash.
11. To select minutes press  or  button.

Note:

If you stop programming at this point, program 2 remains deactivated.

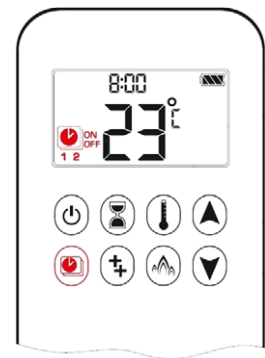

Note:

Programs **1** and **2** use the same **ON** and **OFF** temperatures. Once an **ON** and/or **OFF** temperature has been set, that temperature becomes the new default setting.

1. To continue to program **2**, press button. , **2** and **ON** displayed, hour flashes.
2. To select hour, press or button.
3. To confirm, press button. , **2** and **ON** displayed, minutes flash.
4. To select minutes, press or button.
5. To confirm, press button. , **2** and **OFF** displayed, hour flashes.
6. To select hour, press or button.
7. To confirm, press button. , **2** and **OFF** displayed, minutes flash.
8. To select minutes, press or button.
9. To confirm, press button or wait.

Note:

Programs **1** and **2** use the same **ON** and **OFF** temperatures. Once an **ON** and/or **OFF** temperature has been set, that temperature becomes the new default setting.




Eco mode

ON:

Press button to enter Eco Mode. disappears.

OFF:

Press button. displayed.

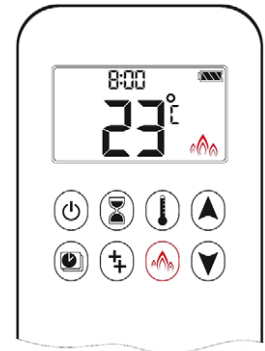

Auxiliary feature


Upon ignition burner 1 is **ON** and burner 2 is in the last setting

OFF:

To switch the burner **OFF**, press the button. disappears.

ON:

To switch a burner **ON**, press the button. displayed.

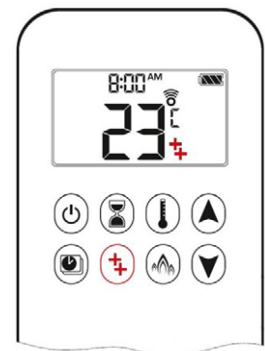**Note:**




The latching solenoid valve cannot operate manually the receiver battery runs down it will remain in the operating position.



Please follow the indicated safety recommendations and warning notices!


Child proof

ON:

To activate press  and  button simultaneously.  displayed and the handset is rendered inoperable, except for the **OFF** function.

OFF:

To deactivate press  and  simultaneously.  disappears.

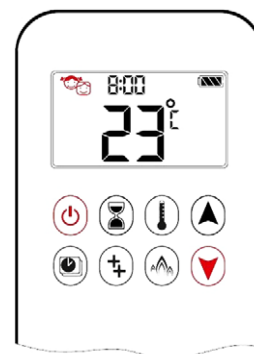

Please follow the indicated safety recommendations and warning notices!