




1. General

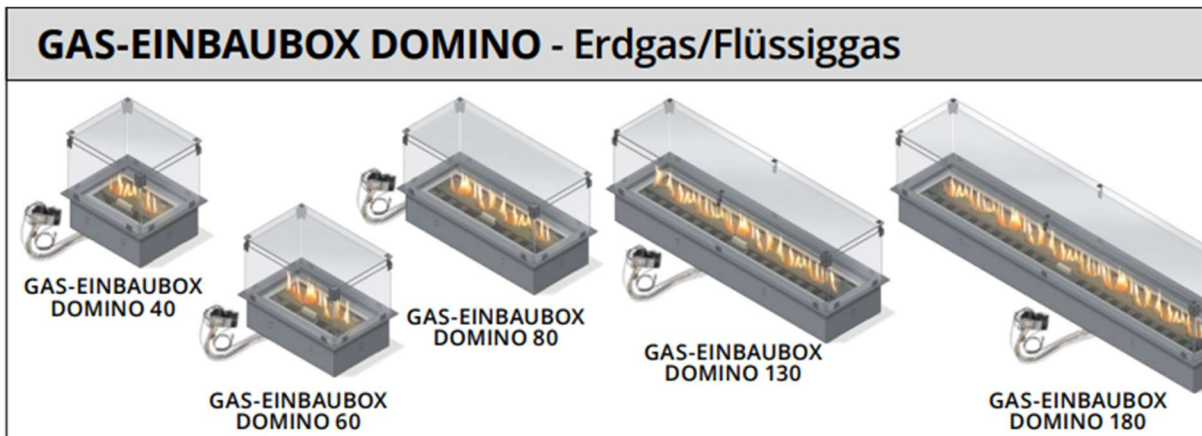

The following document illustrates the assembly of the wind and contact protection glasses for the gas burner types Domino.



2. Tools needed

	Screwdriver cross
	Allen key 2,5

3. Step by step guide

<p>Insert and fix inner glasses</p>		<p>Insert the inner glasses into the pre-assembled glass holders. Lightly tighten the pre-assembled screw using a screwdriver.</p>
<p>Insert and fix outer glasses</p>		<p>Insert the set of glasses in the preassembled glass holders on the outside, one after the other. Lightly tighten the preassembled screw using a screwdriver.</p>
<p>Attach holder for cover glass</p>		<p>Insert the holder for cover glass at the corner points of the outer glasses and fix it with the screw.</p>

<p>Mount cover glass</p>		<p>Place cover glass on holder for cover glass and fix in place using enclosed screws.</p>
--------------------------	--	--